
Mirage Platinum

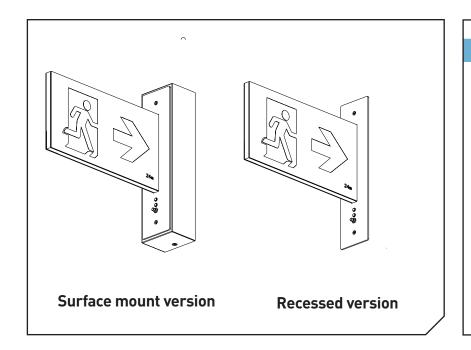




Specifications:

Supply voltage	230-240V a.c. 50Hz
Power input	3W

NOTE: This sign is configured for maintained operation only.

- 1. Make a cut out in the wall. (Fig.A)
- 2. Connect the battery to the pack then connect the flex and plug to mains. For DALI models, connect the two DALI wires to the DALI terminals.
- 3. Place pack inside wall cavity and secure to the strut. (Fig.B)
- 4. Connect the pack to the exit sign plate. (max length from unit to pack shall not exceed 1.5m). (Fig C)
- 5. Screw unit in position (using supplied screws). (Fig.D)

Note: Designed for plasterboard, wood & metal surfaces.

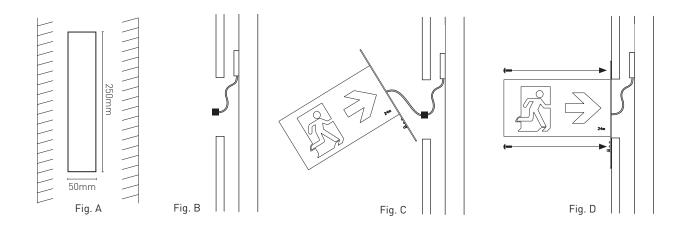

Surfaced mount versions

- $1. \ Feed \ the \ mains \ cable \ through \ the \ base \ and \ fix \ the \ base \ of \ the \ surface \ mount \ box \ to \ the \ wall \ .$
- 2. Connect the mains cable to the terminal block. For DALI models, connect the two DALI wires to the DALI terminals.
- 3. Connect the battery to the pack.
- 4. Connect the pack to the exit sign plate.
- 5. Fix exit sign plate to box cover.
- $\ensuremath{\text{6}}.$ Fix the cover to the base and lock into position with screws provided.

